Packaging and Loading

Packaging and Loading - A (Decking size:1850*137*20mm)

Step 1

115

1880

1120

a. Multiply Pallet or fumigated wood pallet.
b. The size of the pallet is 1880*1120*115MM.
c. Inner height is 10mm for forklift truck working.

Step 2

put on the 4mm plywood.

Step 3

8 pieces wide (8 rows).

Step 4

There are 5 bands in the middle of the pallet per 8 layers.

Step 5

a. 192 pcs per pallet (8 rows*24 layers)
b. There are corner guard on each corner.
c. Put a 4mm plywood on the top.
d. Band the whole pallets.
e. Wrap the film at least three layers and ensure full of the decking.

Step 6

615mm

1200mm

1880mm

dasso
Global Innovator of Bamboo Products

dassoXTR dassoCTECH
for Exterior Use

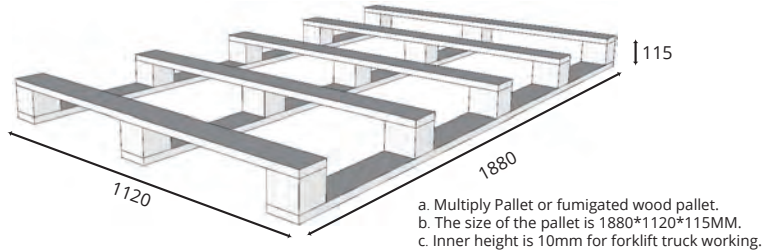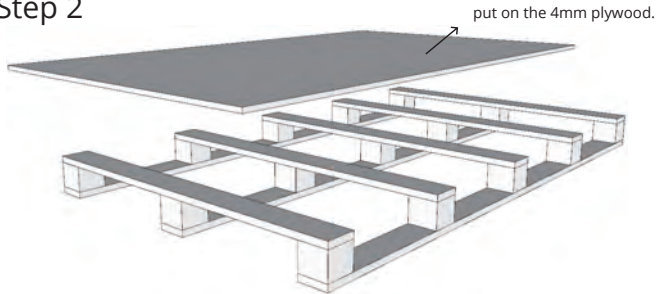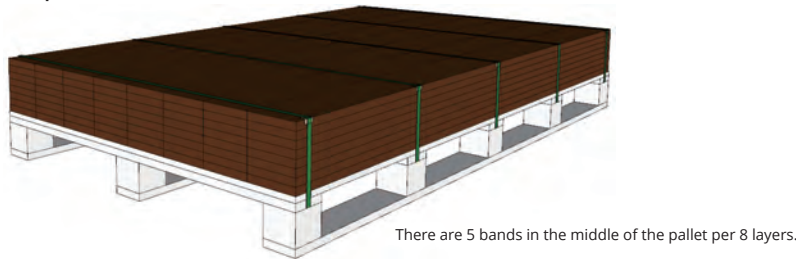a. Put on the protective Pallet Covers and mark the sub-brand.
b. Stick the pallet label.
c. The size of finished package is 1880*1200*615mm. Weight: 1193kg.

Step 7

5640.00

1860.00

Loading quantity: 18 Pallets per FCL20' (875.92 M2/ FCL20')

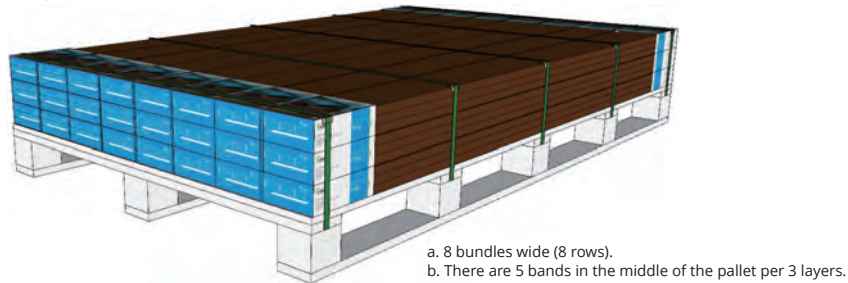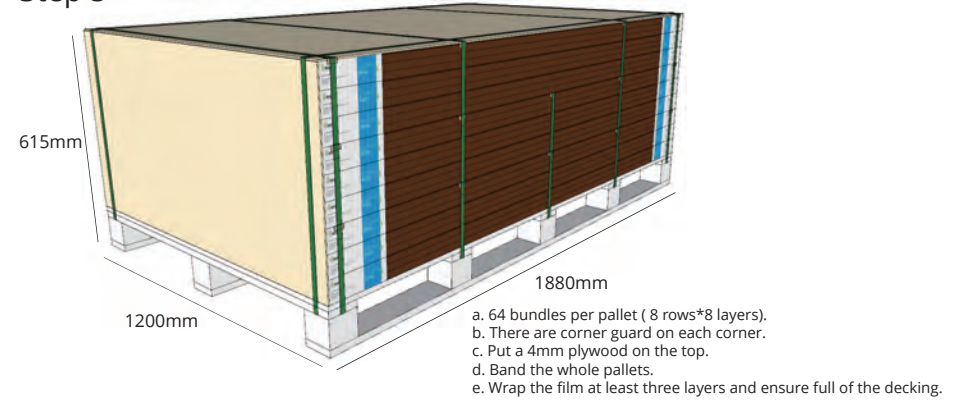# Packaging and Loading - B (Decking size:1850*137*20mm)

Step 1

1120
1880
115

a. Multiply Pallet or fumigated wood pallet.
b. The size of the pallet is 1880*1120*115MM.
c. Inner height is 10mm for forklift truck working.

Step 2

put on the 4mm plywood.

Step 3

a. 3 pieces per bundle.
b. Placing the paper sleeves on each end of the bundle.
c. Band two strips on each bundle.

Step 4

a. 8 bundles wide (8 rows).
b. There are 5 bands in the middle of the pallet per 3 layers.

Step 5

615mm
1200mm
1880mm

a. 64 bundles per pallet (8 rows*8 layers).
b. There are corner guard on each corner.
c. Put a 4mm plywood on the top.
d. Band the whole pallets.
e. Wrap the film at least three layers and ensure full of the decking.

Step 6

615mm
1200mm
1880mm

dasso
Global Innovator of Bamboo Products
dassoXTR dassoCTECH
for Exterior Use

a. Put on the protective Pallet Covers and mark the sub-brand.
b. Stick the pallet label.
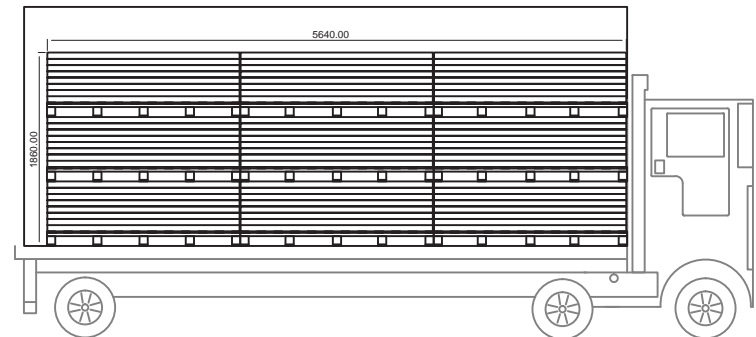c. The size of finished package is 1880*1200*615mm. Weight: 1198kg.
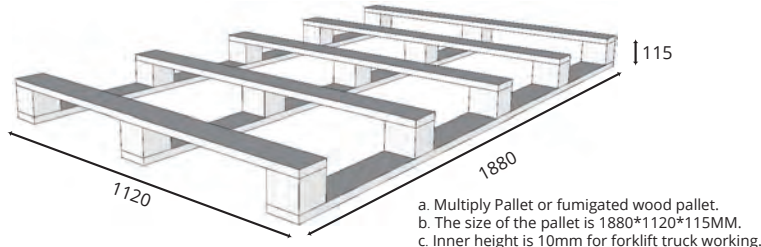
Step 7

5640.00
1860.00

Loading quantity:
18 Pallets per FCL20' (875.92 M2/ FCL20')
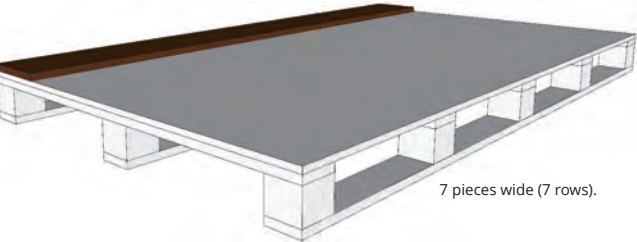
Packaging and Loading - A (Decking size:1850*155*20mm)

Step 1

1880
1120
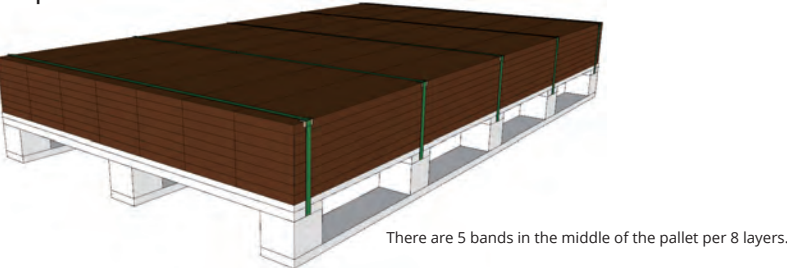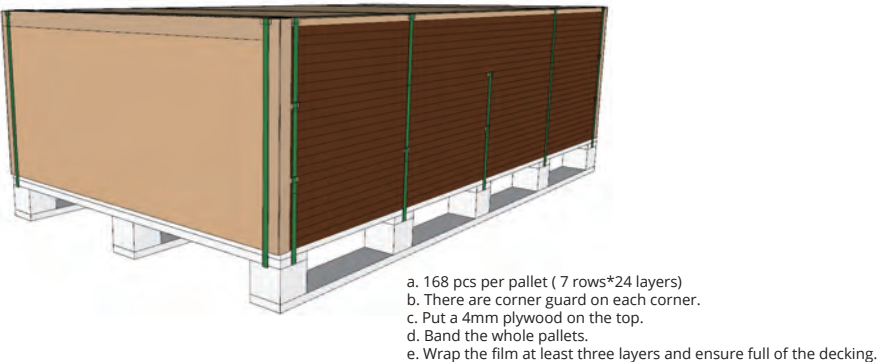115

a. Multiply Pallet or fumigated wood pallet.
b. The size of the pallet is 1880*1120*115MM.
c. Inner height is 10mm for forklift truck working.

Step 2

put on the 4mm plywood.

Step 3

7 pieces wide (7 rows).

Step 4

There are 5 bands in the middle of the pallet per 8 layers.

Step 5

a. 168 pcs per pallet (7 rows*24 layers)
b. There are corner guard on each corner.
c. Put a 4mm plywood on the top.
d. Band the whole pallets.
e. Wrap the film at least three layers and ensure full of the decking.

Step 6

615mm
1200mm
1880mm

dasso
Global Innovator of Bamboo Products
dassoXTR dassoCTECH
for Exterior Use

a. Put on the protective Pallet Covers and mark the sub-brand.
b. Stick the pallet label.
c. The size of finished package is 1880*1200*615mm. Weight: 1181kg.

Step 7

5640.00
1860.00

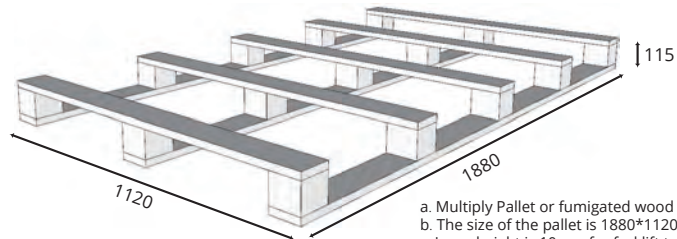Loading quantity: 18 Pallets per FCL20' (867.132 M2/ FCL20')
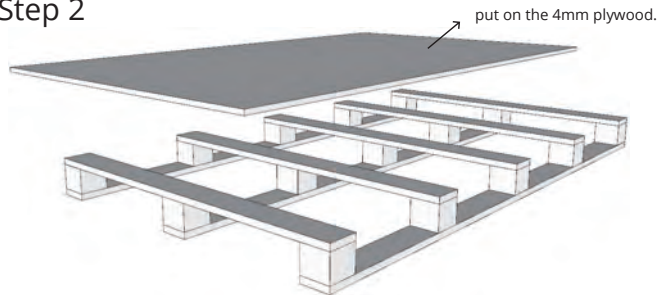
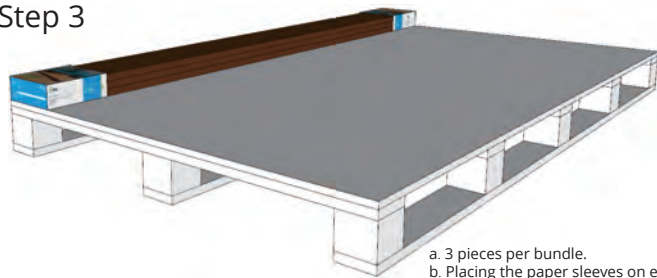# Packaging and Loading - B (Decking size:1850*155*20mm)

Step 1

115

1120

1880

a. Multiply Pallet or fumigated wood pallet.
b. The size of the pallet is 1880*1120*115MM.
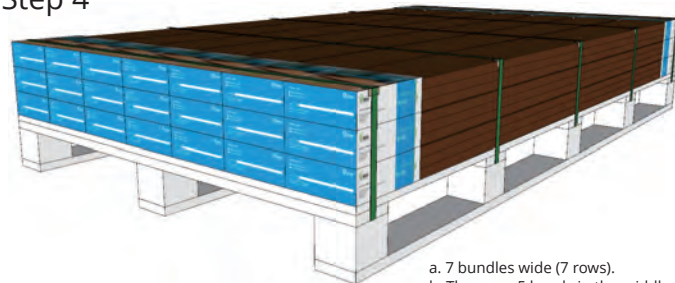c. Inner height is 10mm for forklift truck working.
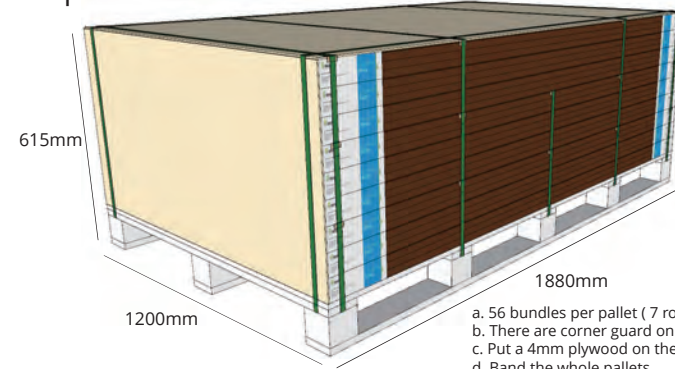
Step 2

put on the 4mm plywood.

Step 3

a. 3 pieces per bundle.
b. Placing the paper sleeves on each end of the bundle.
c. Band two strips on each bundle.

Step 4

a. 7 bundles wide (7 rows).
b. There are 5 bands in the middle of the pallet per 3 layers.

Step 5

615mm

1200mm

1880mm
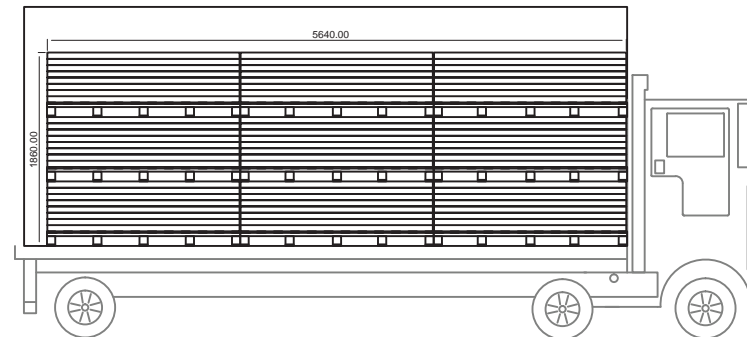
a. 56 bundles per pallet (7 rows*8 layers).
b. There are corner guard on each corner.
c. Put a 4mm plywood on the top.
d. Band the whole pallets.
e. Wrap the film at least three layers and ensure full of the decking.

Step 6

615mm

1200mm

1880mm

dasso
Global Innovator of Bamboo Products

dassoXTR dassoCTECH
for Exterior Use

a. Put on the protective Pallet Covers and mark the sub-brand.
b. Stick the pallet label.
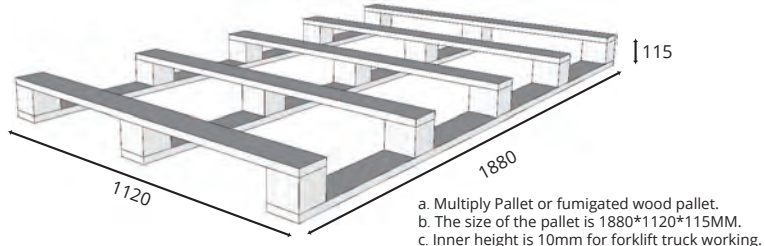c. The size of finished package is 1880*1200*615mm. Weight: 1186 kg.

Step 7

5640.00
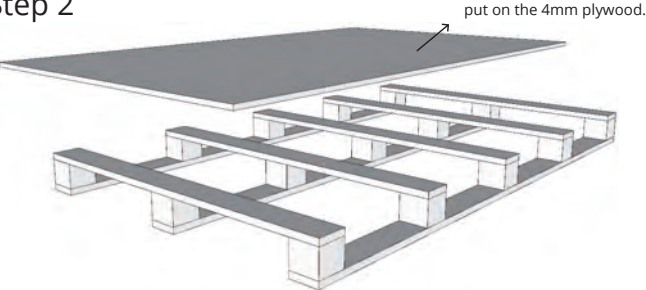
1860.00

Loading quantity:
18 Pallets per FCL20' (867.132 M2/ FCL20')

DECKING

Packaging and Loading - A (Decking size:1850*178*20mm)

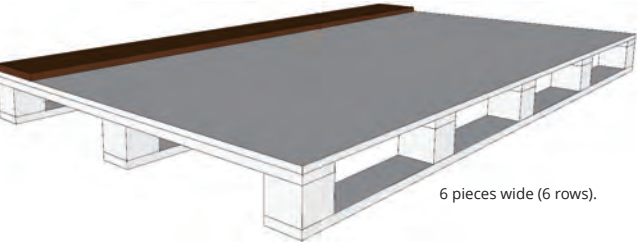### Step 1
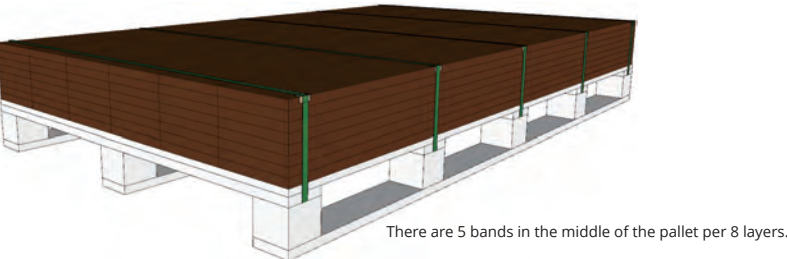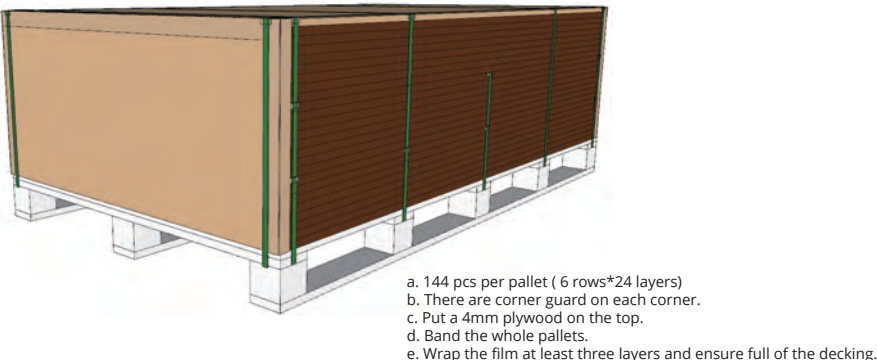

115
1880
1120

a. Multiply Pallet or fumigated wood pallet.
b. The size of the pallet is 1880*1120*115MM.
c. Inner height is 10mm for forklift truck working.

Step 2

put on the 4mm plywood.

Step 3

6 pieces wide (6 rows).

Step 4

There are 5 bands in the middle of the pallet per 8 layers.

Step 5

a. 144 pcs per pallet (6 rows*24 layers)
b. There are corner guard on each corner.
c. Put a 4mm plywood on the top.
d. Band the whole pallets.
e. Wrap the film at least three layers and ensure full of the decking.

Step 6

615mm
1200mm
1880mm

dasso
Global Innovator of Bamboo Products
dassoXTR dassoCTECH
for Exterior Use

a. Put on the protective Pallet Covers and mark the sub-brand.
b. Stick the pallet label.
c. The size of finished package is 1880*1200*615mm. Weight: 1163kg.

Step 7

5640.00
1860.00

Loading quantity: 18 Pallets per FCL20' (853.546 M2/ FCL20')

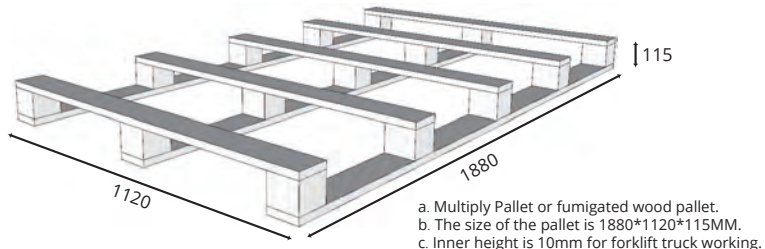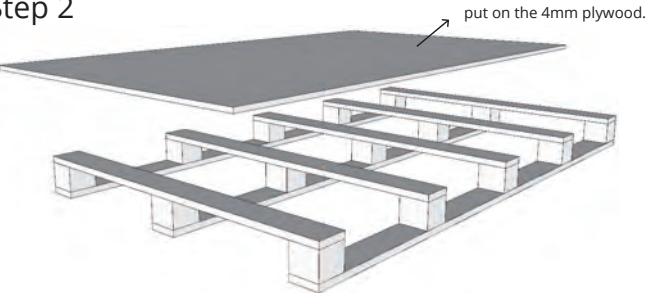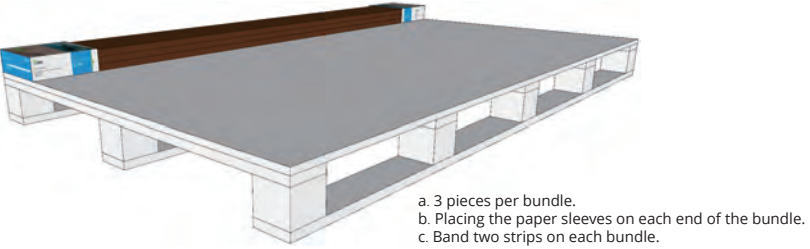# Packaging and Loading - B (Decking size:1850*178*20mm)

Step 1

115
1880
1120

a. Multiply Pallet or fumigated wood pallet.
b. The size of the pallet is 1880*1120*115MM.
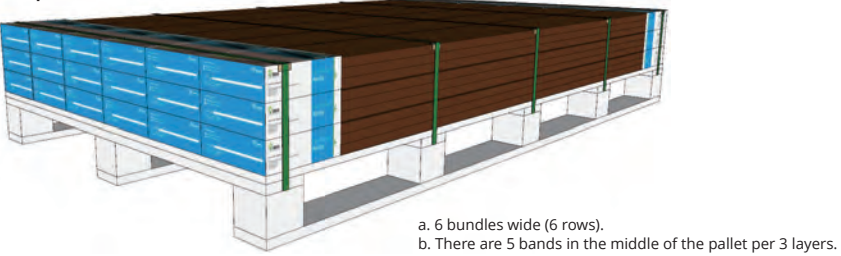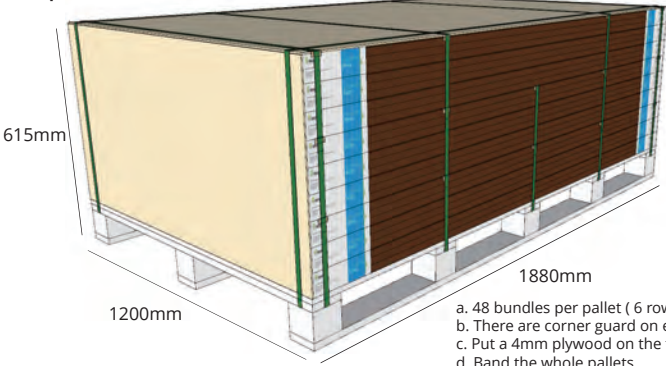c. Inner height is 10mm for forklift truck working.

Step 2

put on the 4mm plywood.

Step 3

a. 3 pieces per bundle.
b. Placing the paper sleeves on each end of the bundle.
c. Band two strips on each bundle.

Step 4

a. 6 bundles wide (6 rows).
b. There are 5 bands in the middle of the pallet per 3 layers.

Step 5

615mm
1880mm
1200mm
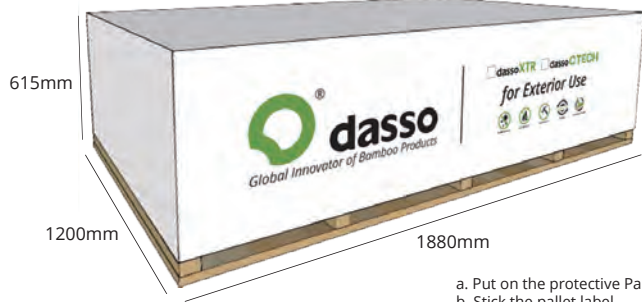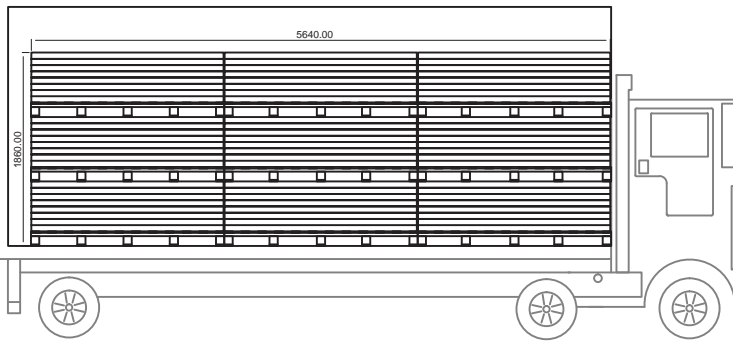
a. 48 bundles per pallet (6 rows*8 layers).
b. There are corner guard on each corner.
c. Put a 4mm plywood on the top.
d. Band the whole pallets.
e. Wrap the film at least three layers and ensure full of the decking.

Step 6

615mm
1200mm
1880mm

dasso®
Global Innovator of Bamboo Products
dassoXTR dassoCTECH
for Exterior Use

a. Put on the protective Pallet Covers and mark the sub-brand.
b. Stick the pallet label.
c. The size of finished package is 1880*1200*615mm. Weight: 1169 kg.

Step 7

5640.00
1860.00

Loading quantity:
18 Pallets per FCL20' (853.546 M2/ FCL20')